



INSTRUCTIONS FOR USING CMA SERIES SOUND SYSTEMS **** READ BEFORE USE ****

SKYTRONIC POLYCARBONATE SERIES LOUDSPEAKERS - VERY IMPORTANT

The 'Speakon' connectors used on these loudspeakers (and many others) will only fit in one position – once inserted they must be turned clockwise to latch into place and activate the connection (and sound) – to remove the connector you must pull the sleeve to release the latch and turn the connector anticlockwise to disengage and disconnect

McGREGOR BGR SERIES AMPLIFIERS - VERY IMPORTANT

Start with the master volume at 12 o'clock (midway) and adjust the input volume controls to the volume required – the radiomic will be connected to 'Mic 1' and the CD player to 'Aux 1'

IMG STAGELINE SERIES CDxxxDJ CD PLAYERS - VERY IMPORTANT

Each and every time that you power these units up (turn them on or connect to the mains) you must press the 'cont / single' button so that the unit either shows 'continue' on the display (allowing you to play the whole CD) or 'single' in the display (pausing the player after each and every track)