



## INSTRUCTIONS FOR CMA3, CMA4 & BG(R)100/250

Connect one or two speakers to sockets on rear of amplifier marked 'LS1' & 'LS2'

Connect mains lead to socket on rear of amplifier

Connect the output lead from your radiomic to the 'mic' input socket on front of amplifier

\*

Switch on mains - this switch is located on rear of amplifier near mains lead

\*

Set 'master' control to approximately mid position

\*

Adjust music (tape, CD etc.) level using 'gain 1' control on MUSIC CHANNEL

(Gain 2 is for future expandability)

Adjust MUSIC CHANNEL 'bass' & 'treble' controls as required

\*

Adjust MICROPHONE CHANNEL 'gain' to obtain best working volume from your radiomic

Adjust MICROPHONE CHANNEL 'bass' & 'treble' controls as required

Adjust MICROPHONE CHANNEL 'priority' control to allow music to drop in volume automatically when you speak.

\*

Re-adjust 'master' level control for desired overall volume

**SPEAKER LEADS:** The amplifier will be damaged if you use faulty speaker leads (or speakers). Always look after your interconnect cables - they are easily damaged in a portable or mobile system. The leads and any damage directly caused by using faulty leads is not covered by the Sound Services warranty unless the leads exhibit a manufacturing fault. Immediately STOP USING THE SYSTEM if you suspect that you have damaged the speaker leads in any way. NEVER use more than two 8 ohm speakers with this system.