



INSTRUCTIONS FOR CMA3, CMA4 & PMX100

Connect one or two speakers to sockets on rear of amplifier marked **SPEAKER 1** & **SPEAKER 2**

Connect mains lead to socket on rear of amplifier

Connect the output lead from your radiomic to the 'mic' input socket on front of amplifier using **CHANNEL 1**

*

Switch on mains - this switch is located on rear of amplifier near mains lead

*

Set **MASTER LEVEL** control on front of amplifier to approximately mid position

*

Adjust music (tape, CD etc.) level using **GAIN** control on **CHANNEL 4**

Adjust music **CHANNEL 4 TONE** control as required - usually set to 12 o'clock

*

Adjust radiomic **CHANNEL 1 GAIN** to obtain best working volume from your radiomic

Adjust radiomic **CHANNEL 1 TONE** control as required - usually set to 12 o'clock

*

Re-adjust **MASTER LEVEL** control on front of amplifier for desired overall volume

Adjust **LOW, MID & HIGH tone** controls on front of amplifier for desired overall tonal quality

- usually set to 12 o'clock

*

PLEASE NOTE: The reverb facility and channel 4 line input socket may be disabled if this amplifier is built into a CMA3 or 4 combination sound system

SPEAKER LEADS: The amplifier will be damaged if you use faulty speaker leads (or speakers). Always look after your interconnect cables - they are easily damaged in a portable or mobile system. The leads and any damage directly caused by using faulty leads is not covered by the Sound Services warranty unless the leads exhibit a manufacturing fault. Immediately **STOP USING THE SYSTEM** if you suspect that you have damaged the speaker leads in any way. **NEVER** use more than two 8 ohm speakers with this system.