
To connect 952.190 paging mic to 952.931 or 952.934 mixer amplifiers (Using a 0.25" unbalanced (2 pole) mono jack plug)

- 1) Disregard the black and the blue wire
- 2) Connect red wire from microphone to tip of the unbalanced (2 pole) mono jack plug and connect white wire and the screen together to the sleeve (body) of from microphone to the unbalanced (2 pole) mono jack plug

To connect 952.190 paging mic to 952.377/952.380 (PA6120/PA6060) or 952.972, 952.969 & 952.966 (900 series) mixer amplifiers (Using a 3 pin XLR connector)

- 1) Connect black and blue wires from microphone to:
Screw terminals on rear of amplifier for microphone priority (if required) on 952.377.952.380
Microphone priority is via 'vox' switch on 900 series (952.972, 952.969, 952.966 etc) amplifiers
- 2) Connect red wire from microphone to pin 2 of the XLR (mic 1) connector or + terminal
Connect white wire from microphone to pin 3 of the XLR (mic 1) connector or - terminal
Connect screen wire from microphone to pin 1 of the XLR (mic 1) connector or ground terminal

Colour code for 952.190 paging mic:

White – mic signal - balanced – connect to screen for unbalanced use
Red – mic signal – balanced
Screen – mic screen
Black –)
Blue –) normally open control switching pair