

Instruction Manual

Thanks for choosing the megaphone. Please study this instruction manual carefully before use to ensure safety and proper usage.

1. Package list

- 1.1 Megaphone
- 1.2 Instruction manual

2. Parts and Functions

1. Speaker: Converts the electrical signal into sound.
2. Microphone: Condenser type microphone that converts the output into electrical signal.
3. VOL. controller: adjust the output volume • turn right to increase and left to decrease.
4. Power Switch: press the switch to activate the megaphone.
5. Handle grip: easy to hold the megaphone.
6. Shoulder strap: easy to carry over one's shoulder or hands.
7. Battery compartment: loads 6pcs of AA batteries.
8. Battery lid: Open to load the batteries.
9. Function switch: Switch for the functions (S for siren , F for fog horn , and W for whistle). Microphone will be off when signal function is on.



3. Operation Instructions:

- 3.1 Power source
- 3.1.1 Power: loads 6pcs of AA batteries into the compartment and put compartment in to megaphone with right direction.

- (Note: The compartment can not be put in with wrong direction switch.
- 3.1.2 Be sure the batteries are well loaded and close the lid in place.
 - 3.2 How to use the megaphone
 - 3.2.1 Find the function switch on the bottom of the megaphone and switch to M position.
 - 3.2.2 Press the trigger and speak to the microphone. The VOL. controller is placed below the microphone. Turn right for louder volume.
 - 3.2.3 Please note the closer the mouth is to the microphone the higher the sound level is.
 - 3.2.4 If feedback is caused, turn the volume lower to it.
 - 3.3 How to activate the functions
 - 3.3.1 Switch the function knob to the required position (S for siren, F for fog horn, and W for whistle, and press the trigger.)

4. Troubleshooting

- 4.1 When the megaphone does not work
- 4.1.2 Check if the battery capacity is too low.
- 4.1.3 Check if the battery terminals are matched correctly & firmly.
- 4.1.4 Check if the battery lid is in place.
- 4.2 When the megaphone functions does not work, check if the knob is on the right position.

5. Specifications

- 5.1 Rated output power: 1.8W
- 5.2 Power source: AA battery 6 pcs
- 5.3 Battery life: approx. 6-hr
- 5.4 Microphone: condenser microphone
- 5.4.1 sensitivity: -78 ~-3dB.
- 5.4.2 impedance: 2.2kΩ.
- 5.5 Dimension: Ø150mm x L307mm
- 5.6 Weight: 0.6kg (without batteries)

6. Precautions

- 6.1 Do not expose under direct sunlight or the high temperature environment for a long period of time.
- 6.2 Avoid exposing to rain, water or heavy humidity.
- 6.3 Do not use the megaphone close to people's ears. This may cause hearing damage.
- 6.4 If not in use for a long period of time, remove the batteries and store them separately to prevent leaking batteries and damaging the circuits inside of the megaphone.
- 6.5 When cleaning the megaphone, please use neutral detergent. Never use detergent including benzene.
- 6.6 This product should be kept away from the screen of TV set, computer and any electrical devices which are with CRT to prevent the interfering

CAROL®



AHM-621

使用説明書