



## Neutrik Speakon Connectors

Are available as 2 or 4 pole versions in various wattage ratings

### To connect / plug-in

- An electrical connection between the Speakon connector (on the end of the cable) and Speakon input socket (on the loudspeaker or amplifier etc.) is not established until the Speakon connector locks into place
- Insert the Speakon connector (plug) into the socket on the amplifier or loudspeaker – the plug will only insert if correctly aligned with the socket
- Twist the Speakon connector clockwise until it engages

### To Remove / disconnect

- To remove the plug from the socket you must slide (pull) the release lever towards the cable coming from the plug and then twist the plug anti-clockwise to disengage from the socket
- Now remove the plug from the socket