

## FREQUENCY CHARTS:

### USA 790-806 MHZ:

	GROUP 1	GROUP 2	GROUP 3	GROUP 4	GROUP 5	GROUP 6	GROUP 7	GROUP 8
CHANNEL 1	790.375MHz	796.375MHz	790.750MHz	799.125MHz	790.250MHz	796.125MHz	790.875MHz	796.750MHz
CHANNEL 2	791.125MHz	799.875MHz	791.625MHz	800.250MHz	791.500MHz	799.375MHz	791.875MHz	799.625MHz
CHANNEL 3	792.125MHz	800.875MHz	792.750MHz	801.375MHz	792.375MHz	800.375MHz	792.625MHz	800.750MHz
CHANNEL 4	793.250MHz	801.625MHz	793.875MHz	802.125MHz	793.000MHz	801.125MHz	793.625MHz	801.500MHz
CHANNEL 5	794.250MHz	802.750MHz	794.625MHz	803.375MHz	794.375MHz	802.250MHz	794.875MHz	802.875MHz
CHANNEL 6	795.125MHz	803.875MHz	795.625MHz	804.250MHz	795.250MHz	803.125MHz	795.750MHz	803.500MHz
CHANNEL 7	796.250MHz	804.750MHz	796.875MHz	805.125MHz	796.375MHz	804.375MHz	796.750MHz	804.875MHz
CHANNEL 8	797.375MHz	805.375MHz	797.750MHz	805.875MHz	797.125MHz	805.500MHz	797.625MHz	805.750MHz

### GERMANY 794-813 MHZ:

	GROUP 1	GROUP 2	GROUP 3	GROUP 4	GROUP 5	GROUP 6	GROUP 7	GROUP 8
CHANNEL 1	794.375MHz	803.750MHz	794.750MHz	804.125MHz	794.875MHz	804.875MHz	795.125MHz	805.250MHz
CHANNEL 2	795.375MHz	805.500MHz	795.625MHz	805.750MHz	795.875MHz	806.125MHz	796.250MHz	806.375MHz
CHANNEL 3	796.500MHz	806.750MHz	796.750MHz	807.125MHz	797.125MHz	807.250MHz	797.375MHz	807.500MHz
CHANNEL 4	797.625MHz	807.750MHz	797.875MHz	808.125MHz	798.125MHz	808.500MHz	798.500MHz	808.750MHz
CHANNEL 5	798.750MHz	808.875MHz	798.875MHz	809.250MHz	799.250MHz	809.500MHz	799.500MHz	809.750MHz
CHANNEL 6	799.875MHz	809.875MHz	800.125MHz	810.125MHz	800.375MHz	810.500MHz	800.625MHz	810.750MHz
CHANNEL 7	801.250MHz	811.125MHz	801.500MHz	811.375MHz	801.750MHz	811.625MHz	802.250MHz	811.750MHz
CHANNEL 8	802.500MHz	812.125MHz	802.750MHz	812.375MHz	803.250MHz	812.500MHz	803.500MHz	812.750MHz

### FRANCE/UK 854.25-865 MHZ:

	GROUP 1	GROUP 2	GROUP 3	GROUP 4	GROUP 5	GROUP 6	GROUP 7	GROUP 8
CHANNEL 1	854.375MHz	858.500MHz	854.500MHz	859.250MHz	854.625MHz	859.500MHz	854.750MHz	859.625MHz
CHANNEL 2	854.875MHz	858.875MHz	855.125MHz	859.750MHz	855.250MHz	859.875MHz	855.375MHz	860.250MHz
CHANNEL 3	855.500MHz	859.375MHz	855.625MHz	860.375MHz	855.750MHz	860.500MHz	856.125MHz	860.625MHz
CHANNEL 4	855.875MHz	860.125MHz	856.250MHz	860.875MHz	856.375MHz	861.125MHz	856.625MHz	861.375MHz
CHANNEL 5	856.500MHz	860.750MHz	856.750MHz	861.625MHz	856.875MHz	861.750MHz	857.250MHz	863.250MHz
CHANNEL 6	857.125MHz	861.250MHz	857.375MHz	863.375MHz	857.500MHz	863.500MHz	857.625MHz	863.625MHz
CHANNEL 7	857.750MHz	861.500MHz	857.875MHz	863.750MHz	858.250MHz	864.250MHz	858.375MHz	864.375MHz
CHANNEL 8	858.125MHz	861.875MHz	858.625MHz	864.500MHz	858.750MHz	864.625MHz	859.125MHz	864.750MHz

# gemini®

